

May 4, 2023 Diane Czarnecki Industrial Hygienist Facilities Management Division GSA Public Buildings Service – Heartland Region 2300 Main Street Kansas City, MO 64108

Re: Goodfellow Federal Center – Bldg. 105 Drinking Water Sampling

Project No. 121244

Dear Ms. Czarnecki:

Thank you for the opportunity to provide the General Services Administration (GSA) with the above referenced environmental sampling activities. The following is our report.

INTRODUCTION

As requested, Burns & McDonnell conducted drinking water sampling and testing for the presence of lead and copper at Building 105 of the Goodfellow Federal Center located at 4300 Goodfellow Boulevard in St. Louis, Missouri. Sampling was completed in response to the ongoing environmental condition assessment at the Goodfellow Federal Center which is documented at the Goodfellow Federal Center Reading Room located at https://www.gsa.gov/portal/content/212361.

Drinking water sampling was conducted to determine the current levels of lead and copper in representative sources throughout the complex. Drinking water sampling at Bldg. 105 was conducted on March 23, 2023 by Justin Arnold of OCCU-TEC.

METHODOLOGY

The sampling methodology used during this investigation was developed in general accordance with the United States Environmental Protection Agency's (EPA) "Quick Guide to Drinking Water Sample Collection – Second Edition" developed by the EPA Region 8 in September 2016.

Samples were collected as first draw samples in accordance with the Lead and Copper Rule (40 CFR Part 141 Subpart I). First draw samples represent 'worst case' conditions with water that has been stationary within the plumbing systems for a minimum of six hours. The samples were collected in individually labeled 1000 milliliter (mL) plastic bottles capped with Teflon septa lined screw caps. The bottles were filled to the shoulder with water from the sample source. The samples were then placed in a cooler for safe transport. Each sample was acidified at the laboratory as needed.



Diane Czarnecki Facilities Management Division May 4, 2023 Page 2

Drinking water sampling for the presence of lead and copper was conducted at thirty-five (35) distinct locations within Building 105. A total of thirty-six (36) samples were obtained including duplicate samples. After each drinking water sample was collected, Burns & McDonnell filled a separate sample cup with approximately 2 inches of water. Burns & McDonnell placed an Oakton EcoTestr pH and temperature meter into the sample cup. After readings stabilized, Burns & McDonnell recorded the readings for pH (the acidity or basicity of an aqueous solution) and the temperature (in degrees Celsius) on site specific sample logs.

Drinking water samples were submitted to Eurofins-Eaton Analytical in South Bend, IN for analyses of lead and copper. Eurofins-Eaton Analytical is certified by the State of Missouri Department of Natural Resources (MDNR) as an approved drinking water laboratory. Eurofins-Eaton Analytical's Missouri Certification number is 880.

The drinking water samples were collected using media supplied by Eurofins-Eaton Analytical. Lead and Copper samples were collected and analyzed in accordance with EPA Method 200.8.

RESULTS AND DISCUSSION

The results for the subject testing are summarized in the table below.

Analysis	Lowest Concentration ^(a)	Highest Concentration ^(a)	Action Level ^(b)
Lead	<0.5 μg/L	22.0 μg/L	15 μg/L
Copper	19 μg/L	540 μg/L	1300 μg/L

Notes:

- (a) Samples with a "<" sign indicate that the results were below the reportable limit.
- (b) As per EPA Lead and Copper Rule (40 CFR Part 141 Subpart I).
- (c) μg/L micrograms per liter

Several samples resulted in lead or copper concentrations over the action levels.

- 1. A sample taken from the northwest foot peddle in lab room 340 on the second floor of building 105 had a lead concentration of 15 μ g/L.
- 2. A sample taken from the sink on the south wall of lab room 324 on the second floor of building 105 had a lead concentration of 22 μ g/L.

A summary table of all sampling results by location is included in Appendix A. The complete laboratory report for the drinking water sampling from Eurofins-Eaton Analytical is attached in Appendix B.



Diane Czarnecki Facilities Management Division May 4, 2023 Page 3

pН

Normal pH levels for drinking water are between 6.0 to 8.5. Water with a pH < 6.5 is considered acidic, soft, and corrosive. Acidic water may contain metal ions, may cause premature damage to metal piping, and increases the likelihood of leaching. Water with a pH > 8.5 is considered alkaline or basic and can indicate that the water is hard. Hard water does not pose a health risk but can cause aesthetic problems. These problems include an alkali taste, the formation of scale deposits, and difficulty in getting soaps and detergents to lather.

Recorded pH levels in Building 105 ranged from 8.70 to 10.30 indicating the drinking water is slightly alkaline.

LIMITATIONS

The scope of this assessment was limited in nature. Burns & McDonnell collected samples from a select number of drinking water sources in an effort to minimize cost while providing a general overview of the drinking water quality at the site. Sample locations do not encompass every drinking water source at the Site. Additionally, samples were only analyzed for a select number of potential contaminants likely to affect the drinking water quality at the site. Burns & McDonnell is not responsible for potential contaminants not identified in this report.

Burns & McDonnell appreciates the opportunity to work with the GSA on this project. Please contact us if you have any questions regarding this report or if we may be of any additional service.

Sincerely,



Matt Shanahan, CHMM Project Manager

Attachments:

Appendix A - Results Summary by Location Appendix B - Water Sample Laboratory Report



Diane Czarnecki Facilities Management Division May 4, 2023 Page 4



Appendix A Results Summary by Location

Sample Number	Location	рН	Temp (°C)	Water Source	Analyte	Result	Units	Above / Below	AL
105-DW-01	1st floor, column H51	8.7	20.9	L DF	Copper	110	μg/L	Below	1300
105-DW-01	1st floor, column H51	8.7	20.9	DF	Lead	1.1	μg/L	Below	15
105-DW-02	1st floor, column H51	9.3	19.3	R DF	Copper	75	μg/L	Below	1300
105-DW-02	1st floor, column H51	9.3	19.3	DF	Lead	1.0	μg/L	Below	15
105-DW-03	1st floor, column A48	9.4	19.7	Sink	Copper	72	μg/L	Below	1300
105-DW-03	1st floor, column A48	9.4	19.7	Sink	Lead	< 0.50	μg/L	Below	15
105-DW-04	Duplicate of 105-DW-03	9.4	19.7	Sink	Copper	80	μg/L	Below	1300
105-DW-04	Duplicate of 105-DW-03	9.4	19.7	Sink	Lead	< 0.50	μg/L	Below	15
105-DW-05	1st Floor A 46 3rd from N Side T&S Sprayer	10.3	19.6	Sink	Copper	70	μg/L	Below	1300
105-DW-05	1st Floor A 46 3rd from N Side T&S Sprayer	10.3	19.6	Sink	Lead	< 0.50	μg/L	Below	15
105-DW-06	1st Floor Column A 46 North Wall Left Side	9.9	19.8	Sink	Copper	72	μg/L	Below	1300
105-DW-06	1st Floor Column A 46 North Wall Left Side	9.9	19.8	Sink	Lead	0.59	μg/L	Below	15
105-DW-07	2nd Floor Breakroom 323 Left Side	9.9	21.0	Sink	Copper	42	μg/L	Below	1300
105-DW-07	2nd Floor Breakroom 323 Left Side	9.9	21.0	Sink	Lead	2.3	μg/L	Below	15
105-DW-08	2nd Floor Breakroom 323 Right Side	9.9	21.7	Sink	Copper	44	μg/L	Below	1300
105-DW-08	2nd Floor Breakroom 323 Right Side	9.9	21.7	Sink	Lead	2.2	μg/L	Below	15
105-DW-09	2nd Floor Column B 42 Left Side	10.0	17.6	DF	Copper	92	μg/L	Below	1300
105-DW-09	2nd Floor Column B 42 Left Side	10.0	17.6	DF	Lead	2.0	μg/L	Below	15
105-DW-10	2nd Floor Column B 42 Right Side	10.0	16.6	DF	Copper	75	μg/L	Below	1300
105-DW-10	2nd Floor Column B 42 Right Side	10.0	16.6	DF	Lead	2.3	μg/L	Below	15
105-DW-11	2nd Floor Column H 51 Left Side	9.7	17.4	DF	Copper	19	μg/L	Below	1300
105-DW-11	2nd Floor Column H 51 Left Side	9.7	17.4	DF	Lead	< 0.50	μg/L	Below	15
105-DW-12	2nd Floor Column H 51 Right Side	9.7	16.3	Bottle Filler	Copper	72	μg/L	Below	1300
105-DW-12	2nd Floor Column H 51 Right Side	9.7	16.3	Bottle Filler	Lead	< 0.50	μg/L	Below	15
105-DW-13	2nd Floor Room 317	10.1	20.0	Sink	Copper	31	μg/L	Below	1300
105-DW-13	2nd Floor Room 317	10.1	20.0	Sink	Lead	< 0.50	μg/L	Below	15
105-DW-14	2nd Floor Room 315 Center Island Foot Peddle	9.9	20,4	Sink	Copper	57	μg/L	Below	1300
105-DW-14	2nd Floor Room 315 Center Island Foot Peddle	9.9	20.4	Sink	Lead	< 0.50	μg/L	Below	15

Appendix A Results Summary by Location

Sample Number	Location	рН	Temp (°C)	Water Source	Analyte	Result	Units	Above / Below	AL
105-DW-15	2nd Floor Room 314 SE Side	10.1	21.0	Sink	Copper	39	μg/L	Below	1300
105-DW-15	2nd Floor Room 314 SE Side	10.1	21.0	Sink	Lead	0.82	μg/L	Below	15
105-DW-16	2nd Floor Room 312 South Wall	10.1	21.2	Sink	Copper	42	μg/L	Below	1300
105-DW-16	2nd Floor Room 312 South Wall	10.1	21.2	Sink	Lead	0.78	μg/L	Below	15
105-DW-17	2nd Floor Room 311 North Wall	10.0	20.6	Sink	Copper	80	μg/L	Below	1300
105-DW-17	2nd Floor Room 311 North Wall	10.0	20.6	Sink	Lead	2.2	μg/L	Below	15
105-DW-18	2nd Floor Room 356 NE Side Foot Peddle	10.1	20.6	Sink	Copper	55	μg/L	Below	1300
105-DW-18	2nd Floor Room 356 NE Side Foot Peddle	10.1	20.6	Sink	Lead	2.3	μg/L	Below	15
105-DW-19	2nd Floor 346 North Wall Foot Peddle	10.1	20.7	Sink	Copper	46	μg/L	Below	1300
105-DW-19	2nd Floor 346 North Wall Foot Peddle	10.1	20.7	Sink	Lead	1.9	μg/L	Below	15
105-DW-20	2nd Floor Room 347 NE Side Foot Peddle	10.3	20.0	Sink	Copper	50	μg/L	Below	1300
105-DW-20	2nd Floor Room 347 NE Side Foot Peddle	10.3	20.0	Sink	Lead	1.6	μg/L	Below	15
105-DW-21	2nd Floor Room 337 SE Side Foot Peddle	10.0	21.5	Sink	Copper	46	μg/L	Below	1300
105-DW-21	2nd Floor Room 337 SE Side Foot Peddle	10.0	21.5	Sink	Lead	1.1	μg/L	Below	15
105-DW-22	2nd Floor Room 337 SE Side Foot Peddle	10.0	21.5	Sink	Copper	37	μg/L	Below	1300
105-DW-22	2nd Floor Room 337 SE Side Foot Peddle	10.0	21.5	Sink	Lead	0.77	μg/L	Below	15
105-DW-23	2nd Floor Room 339 North Center Foot Peddle	9.9	22.3	Sink	Copper	66	μg/L	Below	1300
105-DW-23	2nd Floor Room 339 North Center Foot Peddle	9.9	22.3	Sink	Lead	1.9	μg/L	Below	15
105-DW-24	2nd Floor Room 340 NW Side Foot Peddle	9.9	21.9	Sink	Copper	48	μg/L	Below	1300
105-DW-24	2nd Floor Room 340 NW Side Foot Peddle	9.9	21.9	Sink	Lead	15	μg/L	Above	15
105-DW-25	2nd Floor Room 341 Center island N Side Foot Peddle	9.9	22.1	Sink	Copper	49	μg/L	Below	1300
105-DW-25	2nd Floor Room 341 Center island N Side Foot Peddle	9.9	22.1	Sink	Lead	2.4	μg/L	Below	15
105-DW-26	2nd Floor Room 345 Center island N Side Foot Peddle	10.0	22.2	Sink	Copper	73	μg/L	Below	1300
105-DW-26	2nd Floor Room 345 Center island N Side Foot Peddle	10.0	22.2	Sink	Lead	1.7	μg/L	Below	15
105-DW-27	2nd Floor Room 345 South Wall Side Foot Peddle	10.0	22.4	Sink	Copper	76	μg/L	Below	1300
105-DW-27	2nd Floor Room 345 South Wall Side Foot Peddle	10.0	22.4	Sink	Lead	0.77	μg/L	Below	15
105-DW-28	2nd Floor Room 329 West Wall	9.9	22.2	Sink	Copper	58	μg/L	Below	1300
105-DW-28	2nd Floor Room 329 West Wall	9.9	22.2	Sink	Lead	5.5	μg/L	Below	15

Appendix A

Results Summary by Location

Sample Number	Location	рН	Temp (°C)	Water Source	Analyte	Result	Units	Above / Below	AL
105-DW-29	2nd Floor Room 324 South Wall	9.9	22.0	Sink	Copper	55	μg/L	Below	1300
105-DW-29	2nd Floor Room 324 South Wall	9.9	22.0	Sink	Lead	22	μg/L	Above	15
105-DW-30	2nd Floor Room 319 North Wall	10.1	21.8	Sink	Copper	83	μg/L	Below	1300
105-DW-30	2nd Floor Room 319 North Wall	10.1	21.8	Sink	Lead	5.6	μg/L	Below	15
105-DW-31	1st Floor Column B 31 Oasis	9.6	18.1	DF	Copper	38	μg/L	Below	1300
105-DW-31	1st Floor Column B 31 Oasis	9.6	18.1	DF	Lead	< 0.50	μg/L	Below	15
105-DW-32	1st Floor Breakroom Column B 20	10.1	19.2	Sink	Copper	120	μg/L	Below	1300
105-DW-32	1st Floor Breakroom Column B 20	10.1	19.2	Sink	Lead	0.55	μg/L	Below	15
105-DW-33	1st Floor Breakroom Column B 20	10.1	19.2	Sink	Copper	130	μg/L	Below	1300
105-DW-33	1st Floor Breakroom Column B 20	10.1	19.2	Sink	Lead	0.55	μg/L	Below	15
105-DW-34	1st Floor Column B 19 Left Side	10.1	16.5	DF	Copper	81	μg/L	Below	1300
105-DW-34	1st Floor Column B 19 Left Side	10.1	16.5	DF	Lead	1.7	μg/L	Below	15
105-DW-35	1st Floor Break Room Column B 9	9.9	17.7	Sink	Copper	540	μg/L	Below	1300
105-DW-35	1st Floor Break Room Column B 9	9.9	17.7	Sink	Lead	9.2	μg/L	Below	15
105-DW-36	1st Floor Column B 6 Right Side	9.9	17.3	DF	Copper	100	μg/L	Below	1300
105-DW-36	1st Floor Column B 6 Right Side	9.9	17.3	DF	Lead	2.4	μg/L	Below	15

Notes:

* - Not first draw

Sample exceeds Action Level

DF - Drinking Fountain

D - Duplicate

L/R - Left or Right

AL - Action Level

μg/L - micrograms per liter



. .

PREPARED FOR

Attn: Mr. Matt Shanahan Burns & McDonnell 425 South Woods Mill Road Chesterfield, Missouri 63017

ANALYTICAL REPORT

Generated 4/11/2023 9:33:36 AM

JOB DESCRIPTION

Burns & McDonnell

JOB NUMBER

810-57977-1

Eurofins Eaton Analytical South Bend 110 S Hill Street South Bend IN 46617



Eurofins Eaton Analytical South Bend

Job Notes

The test results in this report relate only to the samples as received by the laboratory and will meet all requirements of the methodology, with any exceptions noted. This report shall not be reproduced except in full, without the express written approval of the laboratory. All questions should be directed to the Eurofins Eaton Analytical, LLC Project Manager.

Authorization

(b) (6)

Generated 4/11/2023 9:33:36 AM

Authorized for release by Amanda Scott, Project Manager Amanda.Scott@et.eurofinsus.com (574)233-4777 2

3

4

5

7

8

. .

Laboratory Job ID: 810-57977-1

Table of Contents

Cover Page	1
Table of Contents	3
Definitions/Glossary	4
Case Narrative	
Client Sample Results	6
Lab Chronicle	12
Certification Summary	
Method Summary	18
Sample Summary	19
Chain of Custody	20
Receipt Checklists	24

Definitions/Glossary

Client: Burns & McDonnell Job ID: 810-57977-1

Project/Site: Burns & McDonnell

Glossary

Abbreviation	These commonly used abbreviations may or may not be present in this report.
¤	Listed under the "D" column to designate that the result is reported on a dry weight basis
%R	Percent Recovery
CFL	Contains Free Liquid
CFU	Colony Forming Unit
CNF	Contains No Free Liquid
DER	Duplicate Error Ratio (normalized absolute difference)

Dil Fac Dilution Factor

DL Detection Limit (DoD/DOE)

DL, RA, RE, IN Indicates a Dilution, Re-analysis, Re-extraction, or additional Initial metals/anion analysis of the sample

DLC Decision Level Concentration (Radiochemistry)

EDL Estimated Detection Limit (Dioxin)

LOD Limit of Detection (DoD/DOE)

LOQ Limit of Quantitation (DoD/DOE)

MCL EPA recommended "Maximum Contaminant Level"

MDA Minimum Detectable Activity (Radiochemistry)

MDC Minimum Detectable Concentration (Radiochemistry)

MDL Method Detection Limit
ML Minimum Level (Dioxin)
MPN Most Probable Number
MQL Method Quantitation Limit

NC Not Calculated

ND Not Detected at the reporting limit (or MDL or EDL if shown)

NEG Negative / Absent
POS Positive / Present

PQL Practical Quantitation Limit

PRES Presumptive QC Quality Control

RER Relative Error Ratio (Radiochemistry)

RL Reporting Limit or Requested Limit (Radiochemistry)

RPD Relative Percent Difference, a measure of the relative difference between two points

TEF Toxicity Equivalent Factor (Dioxin)
TEQ Toxicity Equivalent Quotient (Dioxin)

TNTC Too Numerous To Count

4

5

6

0

10

10

Case Narrative

Client: Burns & McDonnell
Project/Site: Burns & McDonnell

Job ID: 810-57977-1

Job ID: 810-57977-1

Laboratory: Eurofins Eaton Analytical South Bend

Narrative

Job Narrative 810-57977-1

Receipt

The samples were received on 3/30/2023 4:00 PM. Unless otherwise noted below, the samples arrived in good condition, and, where required, properly preserved and on ice.

Receipt Exceptions

One or more containers for the following sample(s) was received empty: Sample 105-DW-27 arrived empty with the water from bottle in the cooler.

Metals

No additional analytical or quality issues were noted, other than those described above or in the Definitions/ Glossary page.

ID. 040 E7077 4

3

4

J

6

0

9

Lab Sample ID: 810-57977-1

Matrix: Drinking Water

Job ID: 810-57977-1

Client Sample ID: 105-DW-01 Date Collected: 03/23/23 04:50 Date Received: 03/30/23 16:00

Method: EPA 200.8 - Meta	als (ICP/MS)						
Analyte	Result Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	1.1	0.50	ug/L			04/10/23 14:46	1
Copper	110	1.0	ug/L			04/10/23 14:46	1

Lab Sample ID: 810-57977-2 Client Sample ID: 105-DW-02 **Matrix: Drinking Water**

Date Collected: 03/23/23 04:52 Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)									
	Analyte	Result C	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	1.0		0.50	ug/L			04/10/23 14:48	1
	Copper	75		1.0	ug/L			04/10/23 14:48	1

Lab Sample ID: 810-57977-3 Client Sample ID: 105-DW-03 **Matrix: Drinking Water**

Date Collected: 03/23/23 04:56 Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)								
	Analyte	Result Quali	ifier RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	<0.50	0.50	ug/L			04/10/23 14:57	1
	Copper	72	1.0	ug/L			04/10/23 14:57	1

Client Sample ID: 105-DW-04 Lab Sample ID: 810-57977-4 **Matrix: Drinking Water**

Date Collected: 03/23/23 04:56 Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)								
Analyte	Result	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	<0.50		0.50	ug/L			04/10/23 14:59	1
Copper	80		1.0	ug/L			04/10/23 14:59	1

Client Sample ID: 105-DW-05 Lab Sample ID: 810-57977-5 Date Collected: 03/23/23 05:00 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)								
Analyte	Result C	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	<0.50		0.50	ug/L			04/10/23 15:01	1
Copper	70		1.0	ug/L			04/10/23 15:01	1

Lab Sample ID: 810-57977-6 Client Sample ID: 105-DW-06 **Matrix: Drinking Water**

Date Collected: 03/23/23 05:03 Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)									
	Analyte	Result	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	0.59		0.50	ug/L			04/10/23 15:07	1
	Copper	72		1.0	ug/L			04/10/23 15:07	1

Eurofins Eaton Analytical South Bend

Date Received: 03/30/23 16:00

Client Sample ID: 105-DW-07

Date Collected: 03/23/23 05:06

Lab Sample ID: 810-57977-7

Matrix: Drinking Water

Job ID: 810-57977-1

Method: EPA	200.8 - Metals	(ICP/MS)
-------------	----------------	----------

Analyte	Result Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	2.3	0.50	ug/L			04/10/23 15:09	1
Copper	42	1.0	ug/L			04/10/23 15:09	1

Client Sample ID: 105-DW-08 Lab Sample ID: 810-57977-8

Date Collected: 03/23/23 05:08 Date Received: 03/30/23 16:00

Matrix: Drinking Water

Mothod: EDA 200 8 - Motals (ICD/MS)

Methou. EPA 200.0 - Met	ais (ICF/IVIS)						
Analyte	Result Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	2.2	0.50	ug/L			04/10/23 15:10	1
Copper	44	1.0	ug/L			04/10/23 15:10	1

Client Sample ID: 105-DW-09 Lab Sample ID: 810-57977-9

Date Collected: 03/23/23 05:10 Date Received: 03/30/23 16:00

Matrix: Drinking Water

Mothod: EDA 200 8 - Motals (ICP/MS)

Wethou: EPA 200.6 - Wetais (ICI	P/IVI3)						
Analyte	Result Qualifie	r RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	2.0	0.50	ug/L			04/10/23 15:12	1
Copper	92	1.0	ug/L			04/10/23 15:12	1

Client Sample ID: 105-DW-10 Lab Sample ID: 810-57977-10

Date Collected: 03/23/23 05:12 Date Received: 03/30/23 16:00

Matrix: Drinking Water

Method: EPA 200.8 - Metals (ICP/MS)

Analyte	Result	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	2.3		0.50	ug/L	<u></u>		04/10/23 15:14	1
Copper	75		1.0	ug/L			04/10/23 15:14	1

Client Sample ID: 105-DW-11 Lab Sample ID: 810-57977-11

Date Collected: 03/23/23 05:18 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)								
	Analyte	Result Qualif	ier RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	<0.50	0.50	ug/L			04/10/23 15:16	1
	Copper	19	1.0	ug/L			04/10/23 15:16	1

Lab Sample ID: 810-57977-12 Client Sample ID: 105-DW-12

Date Collected: 03/23/23 05:20 Date Received: 03/30/23 16:00

Matrix: Drinking Water

Method: EDA 200 8 - Metals (ICD/MS)

Method. EPA 200.0 - Metals (ICP/MS)							
Analyte	Result Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	<0.50	0.50	ug/L			04/10/23 15:18	1
Copper	72	1.0	ug/L			04/10/23 15:18	1

Lab Sample ID: 810-57977-13

Matrix: Drinking Water

Matrix: Drinking Water

Job ID: 810-57977-1

Client Sample ID: 105-DW-13 Date Collected: 03/23/23 05:24 Date Received: 03/30/23 16:00

Mothod: EDA 200 9 Motals (ICD/MS)

Method: EPA 200.8 - Metals (ICP/MS)								
	Analyte	Result Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	<0.50	0.50	ug/L			04/10/23 15:23	1
	Copper	31	1.0	ug/L			04/10/23 15:23	1

Lab Sample ID: 810-57977-14 Client Sample ID: 105-DW-14 **Matrix: Drinking Water**

Date Collected: 03/23/23 05:27 Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)									
	Analyte	Result	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	<0.50		0.50	ug/L			04/10/23 15:25	1
	Copper	57		1.0	ug/L			04/10/23 15:25	1

Client Sample ID: 105-DW-15 Lab Sample ID: 810-57977-15 **Matrix: Drinking Water**

Date Collected: 03/23/23 05:29 Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)								
	Analyte	Result Qu	ualifier RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	0.82	0.50	ug/L			04/10/23 15:27	1
	Copper	39	1.0	ug/L			04/10/23 15:27	1

Client Sample ID: 105-DW-16 Lab Sample ID: 810-57977-16

Date Collected: 03/23/23 05:31 Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)								
	Analyte	Result Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	0.78	0.50	ug/L			04/10/23 15:29	1
	Copper	42	1.0	ua/l			04/10/23 15:29	1

Client Sample ID: 105-DW-17 Lab Sample ID: 810-57977-17 **Matrix: Drinking Water** Date Collected: 03/23/23 05:35

Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)									
	Analyte	Result	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	2.2		0.50	ug/L			04/10/23 15:31	1
	Copper	80		1.0	ug/L			04/10/23 15:31	1

Client Sample ID: 105-DW-18 Lab Sample ID: 810-57977-18 **Matrix: Drinking Water**

Date Collected: 03/23/23 05:38 Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)									
	Analyte	Result	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	2.3		0.50	ug/L			04/10/23 15:33	1
	Copper	55		1.0	ug/L			04/10/23 15:33	1

Client Sample ID: 105-DW-19 Lab Sample ID: 810-57977-19

Date Collected: 03/23/23 05:40 Date Received: 03/30/23 16:00

Lub	Ouiii	pic ib.	010-010	11-10
		Matrix:	Drinking	Water

Job ID: 810-57977-1

Method: EPA 200.8 - Metals (ICP/MS)							
Analyte	Result Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	1.9	0.50	ug/L			04/10/23 16:03	1
Copper	46	1.0	ug/L			04/10/23 16:03	1

Client Sample ID: 105-DW-20

Date Collected: 03/23/23 05:43

Lab Sample ID: 810-57977-20

Matrix: Drinking Water

Date Received: 03/30/23 16:00

Meth	od: EPA 200.8 - Metals (ICP/MS)							
Analy	te Res	ult Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead		.6	0.50	ug/L			04/10/23 16:04	1
Сорр	er	50	1.0	ug/L			04/10/23 16:04	1

Client Sample ID: 105-DW-21

Date Collected: 03/23/23 05:46

Lab Sample ID: 810-57977-21

Matrix: Drinking Water

Date Received: 03/23/23 05:40

Method: EPA 200.8 - Metals (IC	CP/MS)						
Analyte	Result Qualifi	ier RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	1.1	0.50	ug/L			04/10/23 16:06	1
Copper	46	1.0	ug/L			04/10/23 16:06	1

Client Sample ID: 105-DW-22

Date Collected: 03/23/23 05:46

Lab Sample ID: 810-57977-22

Matrix: Drinking Water

Date Collected: 03/23/23 05:46 Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)								
	Analyte	Result Q	ualifier RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	0.77	0.50	ug/L			04/10/23 16:08	1
	Copper	37	1.0	ug/L			04/10/23 16:08	1

Client Sample ID: 105-DW-23

Date Collected: 03/23/23 05:50

Lab Sample ID: 810-57977-23

Matrix: Drinking Water

Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)									
	Analyte	Result	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	1.9		0.50	ug/L			04/10/23 16:10	1
	Copper	66		1.0	ug/L			04/10/23 16:10	1

Client Sample ID: 105-DW-24

Date Collected: 03/23/23 05:52

Lab Sample ID: 810-57977-24

Matrix: Drinking Water

Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)									
	Analyte	Result	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	15		0.50	ug/L			04/10/23 16:12	1
	Copper	48		1.0	ug/L			04/10/23 16:12	1

Job ID: 810-57977-1

Matrix: Drinking Water

Matrix: Drinking Water

Client: Burns & McDonnell Project/Site: Burns & McDonnell

Client Sample ID: 105-DW-25 Lab Sample ID: 810-57977-25 Date Collected: 03/23/23 05:54 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)									
	Analyte	Result	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	2.4		0.50	ug/L			04/10/23 16:14	1
	Copper	49		1.0	ug/L			04/10/23 16:14	1

Client Sample ID: 105-DW-26 Lab Sample ID: 810-57977-26 **Matrix: Drinking Water**

Date Collected: 03/23/23 05:56 Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)									
	Analyte	Result (Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	1.7		0.50	ug/L			04/10/23 16:19	1
	Copper	73		1.0	ug/L			04/10/23 16:19	1

Client Sample ID: 105-DW-28 Lab Sample ID: 810-57977-27 **Matrix: Drinking Water**

Date Collected: 03/23/23 06:00 Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)								
	Analyte	Result Qualif	ier RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	5.5	0.50	ug/L			04/10/23 16:21	1
	Copper	58	1.0	ug/L			04/10/23 16:21	1

Client Sample ID: 105-DW-29 Lab Sample ID: 810-57977-28

Date Collected: 03/23/23 06:04 Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)								
	Analyte	Result Qua	lifier RL	Unit	D	Prepared	Analyzed	Dil Fac
	Lead	22	0.50	ug/L			04/10/23 16:23	1
	Copper	55	1.0	ug/L			04/10/23 16:23	1

Client Sample ID: 105-DW-30 Lab Sample ID: 810-57977-29 Date Collected: 03/23/23 06:08 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (I	CP/MS)							
Analyte	Result C	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	5.6		0.50	ug/L			04/10/23 16:25	1
Copper	83		1.0	ug/L			04/10/23 16:25	1

Lab Sample ID: 810-57977-30 Client Sample ID: 105-DW-31

Date Collected: 03/23/23 06:15 Date Received: 03/30/23 16:00

Method: EPA 200.8 - Metals (ICP/MS)										
	Analyte	Result	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac	
	Lead	<0.50		0.50	ug/L			04/10/23 16:31	1	
	Copper	38		1.0	ua/L			04/10/23 16:31	1	

Eurofins Eaton Analytical South Bend

Date Received: 03/30/23 16:00

Client Sample ID: 105-DW-32 Date Collected: 03/23/23 06:20

Lab Sample ID: 810-57977-31 **Matrix: Drinking Water**

Method:	EPA	200.8	- Metals	(ICP/MS)

method. Li A 200.0 - metalo (
Analyte	Result	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	0.55		0.50	ug/L			04/10/23 16:32	1
Copper	120		1.0	ug/L			04/10/23 16:32	1

Client Sample ID: 105-DW-33 Lab Sample ID: 810-57977-32

Date Collected: 03/23/23 06:20 Date Received: 03/30/23 16:00

Matrix: Drinking Water

Mothod: EDA 200 8 - Motals (ICD/MS)

Welliou. EPA 200.0 - Welais (ICF	-/IVI3)							
Analyte	Result	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	0.55		0.50	ug/L			04/10/23 16:34	1
Copper	130		1.0	ug/L			04/10/23 16:34	1

Client Sample ID: 105-DW-34 **Matrix: Drinking Water**

Date Collected: 03/23/23 06:23 Date Received: 03/30/23 16:00

Lab Sample ID: 810-57977-33

Mothod: EPA 200 8 - Metals (ICP/MS)

Wethod: EPA 200.8 - Wetals (IC	P/IVI5)						
Analyte	Result Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	1.7	0.50	ug/L			04/10/23 16:36	1
Copper	81	1.0	ug/L			04/10/23 16:36	1

Client Sample ID: 105-DW-35 Lab Sample ID: 810-57977-34

Date Collected: 03/23/23 06:25 Date Received: 03/30/23 16:00

Matrix: Drinking Water

Method: EPA 200 8 - Metals (ICP/MS)

Wethou. EPA 200.0 - Wetais (IC	P/IVIO)						
Analyte	Result Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	9.2	0.50	ug/L			04/10/23 16:38	1
Copper	540	1.0	ug/L			04/10/23 16:38	1

Client Sample ID: 105-DW-36 Lab Sample ID: 810-57977-35

Date Received: 03/30/23 16:00

Matrix: Drinking Water Date Collected: 03/23/23 06:28

Analyte	Result	Qualifier	RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	2.4		0.50	ug/L			04/10/23 16:40	1
Copper	100		1.0	ug/L			04/10/23 16:40	1

Client Sample ID: 105-DW-01

Date Collected: 03/23/23 04:50 Date Received: 03/30/23 16:00 Lab Sample ID: 810-57977-1

Matrix: Drinking Water

Matrix: Drinking Water

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Type	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8		1	54816	NB	EA SB	04/10/23 14:46

Client Sample ID: 105-DW-02 Lab Sample ID: 810-57977-2

Date Collected: 03/23/23 04:52 Matrix: Drinking Water

Date Received: 03/30/23 16:00

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Type	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8	 -	1	54816	NB	EA SB	04/10/23 14:48

Client Sample ID: 105-DW-03 Lab Sample ID: 810-57977-3

Date Collected: 03/23/23 04:56 Matrix: Drinking Water

Date Received: 03/30/23 16:00

		Batch	Batch		Dilution	Batch			Prepared
Prep	Туре	Type	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Tota	I/NA	Analysis	200.8			54816	NB	EA SB	04/10/23 14:57

Client Sample ID: 105-DW-04 Lab Sample ID: 810-57977-4

Date Collected: 03/23/23 04:56 Matrix: Drinking Water
Date Received: 03/30/23 16:00

Batch Batch Dilution Batch **Prepared Prep Type** Method Run **Factor Number Analyst** or Analyzed Type Lab Total/NA Analysis 200.8 54816 NB EA SB 04/10/23 14:59

Client Sample ID: 105-DW-05 Lab Sample ID: 810-57977-5

Date Collected: 03/23/23 05:00 Date Received: 03/30/23 16:00

Batch Batch Dilution Batch Prepared Method **Prep Type** Run **Factor** Number Analyst or Analyzed Type Lab 04/10/23 15:01 Total/NA Analysis 200.8 54816 NB EA SB

Client Sample ID: 105-DW-06 Lab Sample ID: 810-57977-6

Date Collected: 03/23/23 05:03 Matrix: Drinking Water

Date Received: 03/30/23 16:00

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Туре	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8			54816	NB	EA SB	04/10/23 15:07

Client Sample ID: 105-DW-07 Lab Sample ID: 810-57977-7

Date Collected: 03/23/23 05:06 Matrix: Drinking Water
Date Received: 03/30/23 16:00

Batch **Batch** Dilution Batch **Prepared** Method or Analyzed **Prep Type** Type Run **Factor Number Analyst** Lab 04/10/23 15:09 200.8 EA SB Total/NA Analysis 54816 NB

Client Sample ID: 105-DW-08

Date Collected: 03/23/23 05:08 Date Received: 03/30/23 16:00

Lab Sample ID: 810-57977-8

Matrix: Drinking Water

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Type	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8		1	54816	NB	EA SB	04/10/23 15:10

Client Sample ID: 105-DW-09 Lab Sample ID: 810-57977-9

Matrix: Drinking Water

Date Collected: 03/23/23 05:10 Date Received: 03/30/23 16:00

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Туре	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8			54816	NB	EA SB	04/10/23 15:12

Client Sample ID: 105-DW-10 Lab Sample ID: 810-57977-10

Date Collected: 03/23/23 05:12 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Туре	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8		1	54816	NB	EA SB	04/10/23 15:14

Client Sample ID: 105-DW-11 Lab Sample ID: 810-57977-11

Date Collected: 03/23/23 05:18 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Type	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8			54816	NB	EA SB	04/10/23 15:16

Lab Sample ID: 810-57977-12 Client Sample ID: 105-DW-12

Date Collected: 03/23/23 05:20 **Matrix: Drinking Water** Date Received: 03/30/23 16:00

Batch Batch Dilution Batch Prepared

Method **Prep Type** Туре Run Factor Number Analyst or Analyzed Lab 04/10/23 15:18 Total/NA Analysis 200.8 54816 NB EA SB

Client Sample ID: 105-DW-13 Lab Sample ID: 810-57977-13

Date Collected: 03/23/23 05:24 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

	Batch	Batch		Dilution	Batch		Prepared
Prep Type	Type	Method	Run	Factor	Number Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8			54816 NB	FA SB	04/10/23 15:23

Client Sample ID: 105-DW-14 Lab Sample ID: 810-57977-14

Date Collected: 03/23/23 05:27 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Type	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8		1	54816	NB	EA SB	04/10/23 15:25

Client Sample ID: 105-DW-15

Lab Sample ID: 810-57977-15

Matrix: Drinking Water

Matrix: Drinking Water

Date Collected: 03/23/23 05:29 Date Received: 03/30/23 16:00

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Type	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8		1	54816	NB	EA SB	04/10/23 15:27

Client Sample ID: 105-DW-16 Lab Sample ID: 810-57977-16

Date Collected: 03/23/23 05:31 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Type	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8		1	54816	NB	EA SB	04/10/23 15:29

Client Sample ID: 105-DW-17 Lab Sample ID: 810-57977-17

Date Collected: 03/23/23 05:35 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Type	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8		1	54816	NB	EA SB	04/10/23 15:31

Lab Sample ID: 810-57977-18 Client Sample ID: 105-DW-18

Date Collected: 03/23/23 05:38 **Matrix: Drinking Water** Date Received: 03/30/23 16:00

Batch Batch Dilution Batch **Prepared Prep Type** Method Run **Factor Number Analyst** Lab or Analyzed Type Total/NA Analysis 200.8 54816 NB EA SB 04/10/23 15:33

Client Sample ID: 105-DW-19 Lab Sample ID: 810-57977-19

Date Collected: 03/23/23 05:40 Date Received: 03/30/23 16:00

Batch Batch Dilution Batch Prepared Method **Prep Type** Туре Run Factor Number Analyst or Analyzed Lab 04/10/23 16:03 Total/NA Analysis 200.8 54816 NB EA SB

Client Sample ID: 105-DW-20 Lab Sample ID: 810-57977-20

Date Collected: 03/23/23 05:43 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Type	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8		1 -	54816	NB	EA SB	04/10/23 16:04

Client Sample ID: 105-DW-21 Lab Sample ID: 810-57977-21 **Matrix: Drinking Water**

Date Collected: 03/23/23 05:46 Date Received: 03/30/23 16:00

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Type	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8		1	54816	NB	EA SB	04/10/23 16:06

Client Sample ID: 105-DW-22

Date Collected: 03/23/23 05:46 Date Received: 03/30/23 16:00

Lab Sample ID: 810-57977-22

Matrix: Drinking Water

Matrix: Drinking Water

Batch Dilution Ratch Batch Prepared Method or Analyzed **Prep Type** Type Run **Factor Number Analyst** Lab 04/10/23 16:08 Total/NA 54816 NB EA SB Analysis 200.8

Lab Sample ID: 810-57977-23 Client Sample ID: 105-DW-23

Date Collected: 03/23/23 05:50 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

Batch Batch Dilution Batch **Prepared Prep Type** Type Method Run **Factor Number Analyst** Lab or Analyzed 04/10/23 16:10 Total/NA Analysis 200.8 54816 NB EA SB

Client Sample ID: 105-DW-24 Lab Sample ID: 810-57977-24

Date Collected: 03/23/23 05:52 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

Batch Batch Dilution Batch Prepared **Prep Type** Method **Factor Number Analyst** or Analyzed Type Run Lab EA SB 04/10/23 16:12 Total/NA Analysis 200.8 54816 NB

Client Sample ID: 105-DW-25 Lab Sample ID: 810-57977-25

Date Collected: 03/23/23 05:54 **Matrix: Drinking Water** Date Received: 03/30/23 16:00

Batch Batch Dilution Batch Prepared **Prep Type** Method Run Factor **Number Analyst** or Analyzed Type Lab Analysis 200.8 54816 NB EA SB 04/10/23 16:14 Total/NA

Client Sample ID: 105-DW-26 Lab Sample ID: 810-57977-26

Date Collected: 03/23/23 05:56 Date Received: 03/30/23 16:00

Analysis

200.8

Batch Batch Dilution Batch Prepared Method Run Factor Number Analyst or Analyzed **Prep Type** Type Lab 04/10/23 16:19

Client Sample ID: 105-DW-28 Lab Sample ID: 810-57977-27

54816 NB

EASB

Date Collected: 03/23/23 06:00 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

Total/NA

Dilution Batch Batch Batch Prepared **Prep Type** Type Method Run **Factor Number Analyst** Lab or Analyzed 04/10/23 16:21 Total/NA Analysis 200.8 54816 NB EA SB

Lab Sample ID: 810-57977-28 Client Sample ID: 105-DW-29

Date Collected: 03/23/23 06:04 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

Batch Batch Dilution Batch **Prepared** Method or Analyzed **Prep Type** Type Run **Factor Number Analyst** Lab 04/10/23 16:23 200.8 EA SB Total/NA Analysis 54816 NB

Client Sample ID: 105-DW-30

Date Collected: 03/23/23 06:08 Date Received: 03/30/23 16:00

Lab Sample ID: 810-57977-29

Matrix: Drinking Water

Matrix: Drinking Water

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Type	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8		1	54816	NB	EA SB	04/10/23 16:25

Client Sample ID: 105-DW-31

Lab Sample ID: 810-57977-30 **Matrix: Drinking Water**

Date Collected: 03/23/23 06:15 Date Received: 03/30/23 16:00

Batch Batch Dilution Batch Prepared **Prep Type** Type Method Run **Factor Number Analyst** Lab or Analyzed

Total/NA Analysis 200.8 54816 NB EA SB 04/10/23 16:31

Client Sample ID: 105-DW-32 Lab Sample ID: 810-57977-31

Date Collected: 03/23/23 06:20 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

Batch Batch Dilution Batch Prepared Method **Factor Number Analyst** or Analyzed **Prep Type** Type Run Lab EA SB 04/10/23 16:32 Total/NA Analysis 200.8 54816 NB

Client Sample ID: 105-DW-33 Lab Sample ID: 810-57977-32

Matrix: Drinking Water Date Collected: 03/23/23 06:20 Date Received: 03/30/23 16:00

Batch Batch Dilution Batch Prepared **Prep Type** Method Run Factor **Number Analyst** or Analyzed Type Lab Analysis 200.8 54816 NB EA SB 04/10/23 16:34 Total/NA

Client Sample ID: 105-DW-34 Lab Sample ID: 810-57977-33

Date Collected: 03/23/23 06:23

Date Received: 03/30/23 16:00

Batch Batch Dilution Batch Prepared Method Run Number Analyst or Analyzed **Prep Type** Type **Factor** Lab 04/10/23 16:36 Total/NA Analysis 200.8 54816 NB **EASB**

Client Sample ID: 105-DW-35 Lab Sample ID: 810-57977-34

Date Collected: 03/23/23 06:25 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

Dilution Batch Batch Batch Prepared **Prep Type** Type Method Run **Factor Number Analyst** or Analyzed Lab 04/10/23 16:38 Total/NA Analysis 200.8 54816 NB EA SB

Lab Sample ID: 810-57977-35 Client Sample ID: 105-DW-36

Date Collected: 03/23/23 06:28 **Matrix: Drinking Water**

Date Received: 03/30/23 16:00

Batch Batch Dilution Batch Prepared Method Prep Type Type Run **Factor Number Analyst** or Analyzed Lab 04/10/23 16:40 200.8 Total/NA Analysis 54816 NB EA SB

Laboratory References:

EA SB = Eurofins Eaton Analytical South Bend, 110 S Hill Street, South Bend, IN 46617, TEL (574)233-4777

Accreditation/Certification Summary

Client: Burns & McDonnell Job ID: 810-57977-1

Project/Site: Burns & McDonnell

Laboratory: Eurofins Eaton Analytical South Bend

The accreditations/certifications listed below are applicable to this report.

Authority	Program	Identification Number	Expiration Date
Missouri	State	880	09-30-24

.

3

A

7

Method Summary

Client: Burns & McDonnell Project/Site: Burns & McDonnell

Job ID: 810-57977-1

Method	Method Description	Protocol	Laboratory
200.8	Metals (ICP/MS)	EPA	EA SB

Α

Protocol References:

EPA = US Environmental Protection Agency

Laboratory References:

EA SB = Eurofins Eaton Analytical South Bend, 110 S Hill Street, South Bend, IN 46617, TEL (574)233-4777

7

8

Sample Summary

Client: Burns & McDonnell
Project/Site: Burns & McDonnell

Job ID: 810-57977-1

810-57977-1 105-DW-01 Drinking Water 03/23/23 04:50 03/30/23 16:00 810-57977-3 105-DW-02 Drinking Water 03/23/23 04:56 03/30/23 16:00 810-57977-4 105-DW-04 Drinking Water 03/23/23 04:56 03/30/23 16:00 810-57977-5 105-DW-06 Drinking Water 03/23/23 05:00 03/30/23 16:00 810-57977-7 105-DW-06 Drinking Water 03/23/23 05:00 03/30/23 16:00 810-57977-7 105-DW-07 Drinking Water 03/23/23 05:00 03/30/23 16:00 810-57977-8 105-DW-08 Drinking Water 03/23/23 05:00 03/30/23 16:00 810-57977-9 105-DW-09 Drinking Water 03/23/23 05:10 03/30/23 16:00 810-57977-11 105-DW-10 Drinking Water 03/23/23 05:12 03/30/23 16:00 810-57977-12 105-DW-12 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-13 105-DW-13 Drinking Water 03/23/23 05:21 03/30/23 16:00 810-57977-15 105-DW-15 Drinking Water 03/23/23 05:22 03/30/23 16:00 <th>Lab Sample ID</th> <th>Client Sample ID</th> <th>Matrix</th> <th>Collected</th> <th>Received</th>	Lab Sample ID	Client Sample ID	Matrix	Collected	Received
810-57977-3 105-DW-03 Drinking Water 03/23/23 04:56 03/30/23 16:00 810-57977-4 105-DW-05 Drinking Water 03/23/23 05:00 03/30/23 16:00 810-57977-6 105-DW-05 Drinking Water 03/23/23 05:00 03/30/23 16:00 810-57977-7 105-DW-07 Drinking Water 03/23/23 05:00 03/30/23 16:00 810-57977-8 105-DW-08 Drinking Water 03/23/23 05:00 03/30/23 16:00 810-57977-8 105-DW-09 Drinking Water 03/23/23 05:00 03/30/23 16:00 810-57977-10 105-DW-09 Drinking Water 03/23/23 05:10 03/30/23 16:00 810-57977-11 105-DW-11 Drinking Water 03/23/23 05:12 03/30/23 16:00 810-57977-12 105-DW-12 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-12 105-DW-13 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-13 105-DW-13 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-14 105-DW-14 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-15 105-DW-15 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-16 105-DW-16 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-16 105-DW-16 Drinking Water 03/23/23 05:30 03/30/23 16:00 810-57977-17 105-DW-16 Drinking Water 03/23/23 05:30 03/30/23 16:00 810-57977-19 105-DW-16 Drinking Water 03/23/23 05:30 03/30/23 16:00 810-57977-20 105-DW-16 Drinking Water 03/23/23 05:30 03/30/23 16:00 810-57977-21 105-DW-16 Drinking Water 03/23/23 05:30 03/30/23 16:00 810-57977-21 105-DW-20 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-22 105-DW-20 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-22 105-DW-20 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-24 105-DW-26 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-25 105-DW-26 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-26 105-DW-26 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-26 105-DW-26 Drinking Water 03/23/23 05:60 03/30/23 16:00 810-57977-29 105-DW-	810-57977-1	105-DW-01	Drinking Water	03/23/23 04:50	03/30/23 16:00
810-57977-4 105-DW-04 Drinking Water 03/23/23 04:56 03/30/23 16:00 810-57977-5 105-DW-05 Drinking Water 03/23/23 05:00 03/30/23 16:00 810-57977-6 105-DW-06 Drinking Water 03/23/23 05:03 03/30/23 16:00 810-57977-7 105-DW-07 Drinking Water 03/23/23 05:06 03/30/23 16:00 810-57977-8 105-DW-09 Drinking Water 03/23/23 05:10 03/30/23 16:00 810-57977-10 105-DW-10 Drinking Water 03/23/23 05:12 03/30/23 16:00 810-57977-11 105-DW-11 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-12 105-DW-13 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-14 105-DW-13 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-15 105-DW-14 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-16 105-DW-15 Drinking Water 03/23/23 05:30 03/30/23 16:00 810-57977-17 105-DW-16 Drinking Water 03/23/23 05:35 03/30/23 16:00<	810-57977-2	105-DW-02	Drinking Water	03/23/23 04:52	03/30/23 16:00
B10-57977-5	810-57977-3	105-DW-03	Drinking Water	03/23/23 04:56	03/30/23 16:00
810-57977-6 105-DW-06 Drinking Water 03/23/23 05:03 03/30/23 16:00 810-57977-7 105-DW-07 Drinking Water 03/23/23 05:06 03/30/23 16:00 810-57977-8 105-DW-08 Drinking Water 03/23/23 05:00 03/30/23 16:00 810-57977-10 105-DW-09 Drinking Water 03/23/23 05:12 03/30/23 16:00 810-57977-11 105-DW-10 Drinking Water 03/23/23 05:12 03/30/23 16:00 810-57977-12 105-DW-11 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-13 105-DW-12 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-14 105-DW-13 Drinking Water 03/23/23 05:27 03/30/23 16:00 810-57977-15 105-DW-14 Drinking Water 03/23/23 05:27 03/30/23 16:00 810-57977-16 105-DW-16 Drinking Water 03/23/23 05:31 03/30/23 16:00 810-57977-17 105-DW-18 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-18 105-DW-19 Drinking Water 03/23/23 05:35 03/30/23 16:0	810-57977-4	105-DW-04	Drinking Water	03/23/23 04:56	03/30/23 16:00
810-57977-7 105-DW-07 Drinking Water 03/23/23 05:06 03/30/23 16:00 810-57977-8 105-DW-09 Drinking Water 03/23/23 05:08 03/30/23 16:00 810-57977-10 105-DW-09 Drinking Water 03/23/23 05:12 03/30/23 16:00 810-57977-11 105-DW-10 Drinking Water 03/23/23 05:12 03/30/23 16:00 810-57977-12 105-DW-11 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-13 105-DW-12 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-14 105-DW-13 Drinking Water 03/23/23 05:27 03/30/23 16:00 810-57977-15 105-DW-14 Drinking Water 03/23/23 05:27 03/30/23 16:00 810-57977-16 105-DW-15 Drinking Water 03/23/23 05:37 03/30/23 16:00 810-57977-17 105-DW-16 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-18 105-DW-17 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-19 105-DW-19 Drinking Water 03/23/23 05:36 03/30/23 16:	810-57977-5	105-DW-05	Drinking Water	03/23/23 05:00	03/30/23 16:00
810-57977-8 105-DW-08 Drinking Water 03/23/23 05:08 03/30/23 16:00 810-57977-9 105-DW-09 Drinking Water 03/23/23 05:10 03/30/23 16:00 810-57977-10 105-DW-10 Drinking Water 03/23/23 05:12 03/30/23 16:00 810-57977-11 105-DW-11 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-12 105-DW-12 Drinking Water 03/23/23 05:24 03/30/23 16:00 810-57977-13 105-DW-13 Drinking Water 03/23/23 05:24 03/30/23 16:00 810-57977-14 105-DW-14 Drinking Water 03/23/23 05:27 03/30/23 16:00 810-57977-15 105-DW-15 Drinking Water 03/23/23 05:37 03/30/23 16:00 810-57977-16 105-DW-16 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-17 105-DW-17 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-18 105-DW-18 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-19 105-DW-18 Drinking Water 03/23/23 05:40 03/30/23 16:	810-57977-6	105-DW-06	Drinking Water	03/23/23 05:03	03/30/23 16:00
810-57977-9 105-DW-09 Drinking Water 03/23/23 05:10 03/30/23 16:00 810-57977-10 105-DW-10 Drinking Water 03/23/23 05:12 03/30/23 16:00 810-57977-11 105-DW-11 Drinking Water 03/23/23 05:18 03/30/23 16:00 810-57977-12 105-DW-12 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-13 105-DW-13 Drinking Water 03/23/23 05:22 03/30/23 16:00 810-57977-14 105-DW-14 Drinking Water 03/23/23 05:22 03/30/23 16:00 810-57977-15 105-DW-15 Drinking Water 03/23/23 05:32 03/30/23 16:00 810-57977-16 105-DW-16 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-17 105-DW-17 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-19 105-DW-18 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-19 105-DW-19 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-20 105-DW-20 Drinking Water 03/23/23 05:40 03/30/23 16	810-57977-7	105-DW-07	Drinking Water	03/23/23 05:06	03/30/23 16:00
810-57977-10 105-DW-10 Drinking Water 03/23/23 05:12 03/30/23 16:00 810-57977-11 105-DW-11 Drinking Water 03/23/23 05:18 03/30/23 16:00 810-57977-12 105-DW-12 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-13 105-DW-13 Drinking Water 03/23/23 05:24 03/30/23 16:00 810-57977-14 105-DW-14 Drinking Water 03/23/23 05:29 03/30/23 16:00 810-57977-15 105-DW-15 Drinking Water 03/23/23 05:29 03/30/23 16:00 810-57977-16 105-DW-16 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-17 105-DW-17 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-19 105-DW-18 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-19 105-DW-19 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-20 105-DW-20 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-22 105-DW-22 Drinking Water 03/23/23 05:40 03/30/23 1	810-57977-8	105-DW-08	Drinking Water	03/23/23 05:08	03/30/23 16:00
810-57977-11 105-DW-11 Drinking Water 03/23/23 05:18 03/30/23 16:00 810-57977-12 105-DW-12 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-13 105-DW-13 Drinking Water 03/23/23 05:24 03/30/23 16:00 810-57977-14 105-DW-14 Drinking Water 03/23/23 05:29 03/30/23 16:00 810-57977-15 105-DW-15 Drinking Water 03/23/23 05:31 03/30/23 16:00 810-57977-16 105-DW-16 Drinking Water 03/23/23 05:31 03/30/23 16:00 810-57977-17 105-DW-17 Drinking Water 03/23/23 05:33 03/30/23 16:00 810-57977-18 105-DW-18 Drinking Water 03/23/23 05:34 03/30/23 16:00 810-57977-19 105-DW-18 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-19 105-DW-19 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-20 105-DW-20 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-21 105-DW-21 Drinking Water 03/23/23 05:40 03/30/23 1	810-57977-9	105-DW-09	Drinking Water	03/23/23 05:10	03/30/23 16:00
810-57977-12 105-DW-12 Drinking Water 03/23/23 05:20 03/30/23 16:00 810-57977-13 105-DW-13 Drinking Water 03/23/23 05:24 03/30/23 16:00 810-57977-14 105-DW-14 Drinking Water 03/23/23 05:27 03/30/23 16:00 810-57977-15 105-DW-15 Drinking Water 03/23/23 05:29 03/30/23 16:00 810-57977-16 105-DW-16 Drinking Water 03/23/23 05:31 03/30/23 16:00 810-57977-17 105-DW-17 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-18 105-DW-18 Drinking Water 03/23/23 05:36 03/30/23 16:00 810-57977-19 105-DW-19 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-20 105-DW-20 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-21 105-DW-21 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-22 105-DW-22 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-23 105-DW-23 Drinking Water 03/23/23 05:50 03/30/23 1	810-57977-10	105-DW-10	Drinking Water	03/23/23 05:12	03/30/23 16:00
810-57977-13 105-DW-13 Drinking Water 03/23/23 05:24 03/30/23 16:00 810-57977-14 105-DW-14 Drinking Water 03/23/23 05:27 03/30/23 16:00 810-57977-15 105-DW-15 Drinking Water 03/23/23 05:29 03/30/23 16:00 810-57977-16 105-DW-16 Drinking Water 03/23/23 05:31 03/30/23 16:00 810-57977-17 105-DW-17 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-18 105-DW-18 Drinking Water 03/23/23 05:38 03/30/23 16:00 810-57977-19 105-DW-19 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-20 105-DW-20 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-21 105-DW-21 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-22 105-DW-22 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-23 105-DW-23 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-24 105-DW-25 Drinking Water 03/23/23 05:54 03/30/23 1	810-57977-11	105-DW-11	Drinking Water	03/23/23 05:18	03/30/23 16:00
810-57977-14 105-DW-14 Drinking Water 03/23/23 05:27 03/30/23 16:00 810-57977-15 105-DW-15 Drinking Water 03/23/23 05:29 03/30/23 16:00 810-57977-16 105-DW-16 Drinking Water 03/23/23 05:31 03/30/23 16:00 810-57977-17 105-DW-17 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-18 105-DW-18 Drinking Water 03/23/23 05:38 03/30/23 16:00 810-57977-19 105-DW-19 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-20 105-DW-20 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-21 105-DW-21 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-22 105-DW-22 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-24 105-DW-23 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-25 105-DW-25 Drinking Water 03/23/23 05:54 03/30/23 16:00 810-57977-26 105-DW-26 Drinking Water 03/23/23 05:56 03/30/23 16:00 810-57977-27 105-DW-28 Drinking Water <td>810-57977-12</td> <td>105-DW-12</td> <td>Drinking Water</td> <td>03/23/23 05:20</td> <td>03/30/23 16:00</td>	810-57977-12	105-DW-12	Drinking Water	03/23/23 05:20	03/30/23 16:00
810-57977-15 105-DW-15 Drinking Water 03/23/23 05:29 03/30/23 16:00 810-57977-16 105-DW-16 Drinking Water 03/23/23 05:31 03/30/23 16:00 810-57977-17 105-DW-17 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-18 105-DW-18 Drinking Water 03/23/23 05:38 03/30/23 16:00 810-57977-19 105-DW-19 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-20 105-DW-20 Drinking Water 03/23/23 05:43 03/30/23 16:00 810-57977-21 105-DW-21 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-22 105-DW-22 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-23 105-DW-23 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-25 105-DW-25 Drinking Water 03/23/23 05:54 03/30/23 16:00 810-57977-26 105-DW-26 Drinking Water 03/23/23 05:54 03/30/23 16:00 810-57977-27 105-DW-28 Drinking Water 03/23/23 06:00 03/30/23 1	810-57977-13	105-DW-13	Drinking Water	03/23/23 05:24	03/30/23 16:00
810-57977-16 105-DW-16 Drinking Water 03/23/23 05:31 03/30/23 16:00 810-57977-17 105-DW-17 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-18 105-DW-18 Drinking Water 03/23/23 05:38 03/30/23 16:00 810-57977-19 105-DW-19 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-20 105-DW-20 Drinking Water 03/23/23 05:43 03/30/23 16:00 810-57977-21 105-DW-21 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-22 105-DW-22 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-23 105-DW-23 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-24 105-DW-23 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-25 105-DW-25 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-26 105-DW-26 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-27 105-DW-28 Drinking Water 03/23/23 06:00 03/30/23 1	810-57977-14	105-DW-14	Drinking Water	03/23/23 05:27	03/30/23 16:00
810-57977-17 105-DW-17 Drinking Water 03/23/23 05:35 03/30/23 16:00 810-57977-18 105-DW-18 Drinking Water 03/23/23 05:38 03/30/23 16:00 810-57977-19 105-DW-19 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-20 105-DW-20 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-21 105-DW-21 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-22 105-DW-22 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-23 105-DW-23 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-24 105-DW-24 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-25 105-DW-25 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-26 105-DW-26 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-27 105-DW-28 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-29 105-DW-30 Drinking Water 03/23/23 06:00 03/30/23 1	810-57977-15	105-DW-15	Drinking Water	03/23/23 05:29	03/30/23 16:00
810-57977-18 105-DW-18 Drinking Water 03/23/23 05:38 03/30/23 16:00 810-57977-19 105-DW-19 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-20 105-DW-20 Drinking Water 03/23/23 05:43 03/30/23 16:00 810-57977-21 105-DW-21 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-22 105-DW-22 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-23 105-DW-23 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-24 105-DW-24 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-25 105-DW-25 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-26 105-DW-28 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-28 105-DW-29 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-30 105-DW-31 Drinking Water 03/23/23 06:05 03/30/23 16:00 810-57977-31 105-DW-32 Drinking Water 03/23/23 06:20 03/30/23 1	810-57977-16	105-DW-16	Drinking Water	03/23/23 05:31	03/30/23 16:00
810-57977-18 105-DW-18 Drinking Water 03/23/23 05:38 03/30/23 16:00 810-57977-19 105-DW-19 Drinking Water 03/23/23 05:40 03/30/23 16:00 810-57977-20 105-DW-20 Drinking Water 03/23/23 05:43 03/30/23 16:00 810-57977-21 105-DW-21 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-22 105-DW-22 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-23 105-DW-23 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-24 105-DW-24 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-25 105-DW-25 Drinking Water 03/23/23 05:56 03/30/23 16:00 810-57977-26 105-DW-26 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-27 105-DW-28 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-29 105-DW-30 Drinking Water 03/23/23 06:04 03/30/23 16:00 810-57977-31 105-DW-31 Drinking Water 03/23/23 06:20 03/30/23 1	810-57977-17	105-DW-17	Drinking Water	03/23/23 05:35	03/30/23 16:00
810-57977-20 105-DW-20 Drinking Water 03/23/23 05:43 03/30/23 16:00 810-57977-21 105-DW-21 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-22 105-DW-22 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-23 105-DW-23 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-24 105-DW-24 Drinking Water 03/23/23 05:52 03/30/23 16:00 810-57977-25 105-DW-25 Drinking Water 03/23/23 05:54 03/30/23 16:00 810-57977-26 105-DW-26 Drinking Water 03/23/23 05:56 03/30/23 16:00 810-57977-27 105-DW-28 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-28 105-DW-29 Drinking Water 03/23/23 06:04 03/30/23 16:00 810-57977-30 105-DW-30 Drinking Water 03/23/23 06:08 03/30/23 16:00 810-57977-31 105-DW-32 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-32 105-DW-33 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-33 105-DW-34 Drinking Water <td>810-57977-18</td> <td>105-DW-18</td> <td></td> <td>03/23/23 05:38</td> <td>03/30/23 16:00</td>	810-57977-18	105-DW-18		03/23/23 05:38	03/30/23 16:00
810-57977-20 105-DW-20 Drinking Water 03/23/23 05:43 03/30/23 16:00 810-57977-21 105-DW-21 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-22 105-DW-22 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-23 105-DW-23 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-24 105-DW-24 Drinking Water 03/23/23 05:52 03/30/23 16:00 810-57977-25 105-DW-25 Drinking Water 03/23/23 05:56 03/30/23 16:00 810-57977-26 105-DW-28 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-28 105-DW-29 Drinking Water 03/23/23 06:04 03/30/23 16:00 810-57977-29 105-DW-30 Drinking Water 03/23/23 06:08 03/30/23 16:00 810-57977-30 105-DW-31 Drinking Water 03/23/23 06:15 03/30/23 16:00 810-57977-31 105-DW-32 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-32 105-DW-33 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-33 105-DW-34 Drinking Water <td>810-57977-19</td> <td>105-DW-19</td> <td>Drinking Water</td> <td>03/23/23 05:40</td> <td>03/30/23 16:00</td>	810-57977-19	105-DW-19	Drinking Water	03/23/23 05:40	03/30/23 16:00
810-57977-21 105-DW-21 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-22 105-DW-22 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-23 105-DW-23 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-24 105-DW-24 Drinking Water 03/23/23 05:52 03/30/23 16:00 810-57977-25 105-DW-25 Drinking Water 03/23/23 05:54 03/30/23 16:00 810-57977-26 105-DW-26 Drinking Water 03/23/23 05:56 03/30/23 16:00 810-57977-27 105-DW-28 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-28 105-DW-29 Drinking Water 03/23/23 06:04 03/30/23 16:00 810-57977-30 105-DW-30 Drinking Water 03/23/23 06:05 03/30/23 16:00 810-57977-31 105-DW-32 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-32 105-DW-33 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-33 105-DW-34 Drinking Water 03/23/23 06:23 03/30/23 16:00	810-57977-20	105-DW-20	_	03/23/23 05:43	03/30/23 16:00
810-57977-22 105-DW-22 Drinking Water 03/23/23 05:46 03/30/23 16:00 810-57977-23 105-DW-23 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-24 105-DW-24 Drinking Water 03/23/23 05:52 03/30/23 16:00 810-57977-25 105-DW-25 Drinking Water 03/23/23 05:54 03/30/23 16:00 810-57977-26 105-DW-26 Drinking Water 03/23/23 05:56 03/30/23 16:00 810-57977-27 105-DW-28 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-28 105-DW-29 Drinking Water 03/23/23 06:04 03/30/23 16:00 810-57977-30 105-DW-30 Drinking Water 03/23/23 06:08 03/30/23 16:00 810-57977-31 105-DW-31 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-32 105-DW-33 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-33 105-DW-34 Drinking Water 03/23/23 06:23 03/30/23 16:00	810-57977-21	105-DW-21	_	03/23/23 05:46	03/30/23 16:00
810-57977-23 105-DW-23 Drinking Water 03/23/23 05:50 03/30/23 16:00 810-57977-24 105-DW-24 Drinking Water 03/23/23 05:52 03/30/23 16:00 810-57977-25 105-DW-25 Drinking Water 03/23/23 05:54 03/30/23 16:00 810-57977-26 105-DW-26 Drinking Water 03/23/23 05:56 03/30/23 16:00 810-57977-27 105-DW-28 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-28 105-DW-29 Drinking Water 03/23/23 06:04 03/30/23 16:00 810-57977-29 105-DW-30 Drinking Water 03/23/23 06:08 03/30/23 16:00 810-57977-30 105-DW-31 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-31 105-DW-32 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-32 105-DW-33 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-33 105-DW-34 Drinking Water 03/23/23 06:23 03/30/23 16:00	810-57977-22	105-DW-22		03/23/23 05:46	03/30/23 16:00
810-57977-24 105-DW-24 Drinking Water 03/23/23 05:52 03/30/23 16:00 810-57977-25 105-DW-25 Drinking Water 03/23/23 05:54 03/30/23 16:00 810-57977-26 105-DW-26 Drinking Water 03/23/23 05:56 03/30/23 16:00 810-57977-27 105-DW-28 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-28 105-DW-29 Drinking Water 03/23/23 06:04 03/30/23 16:00 810-57977-29 105-DW-30 Drinking Water 03/23/23 06:08 03/30/23 16:00 810-57977-30 105-DW-31 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-31 105-DW-32 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-32 105-DW-33 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-33 105-DW-34 Drinking Water 03/23/23 06:23 03/30/23 16:00	810-57977-23	105-DW-23	_	03/23/23 05:50	03/30/23 16:00
810-57977-25 105-DW-25 Drinking Water 03/23/23 05:54 03/30/23 16:00 810-57977-26 105-DW-26 Drinking Water 03/23/23 05:56 03/30/23 16:00 810-57977-27 105-DW-28 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-28 105-DW-29 Drinking Water 03/23/23 06:04 03/30/23 16:00 810-57977-29 105-DW-30 Drinking Water 03/23/23 06:08 03/30/23 16:00 810-57977-30 105-DW-31 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-31 105-DW-32 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-32 105-DW-33 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-33 105-DW-34 Drinking Water 03/23/23 06:23 03/30/23 16:00	810-57977-24	105-DW-24	_	03/23/23 05:52	03/30/23 16:00
810-57977-26 105-DW-26 Drinking Water 03/23/23 05:56 03/30/23 16:00 810-57977-27 105-DW-28 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-28 105-DW-29 Drinking Water 03/23/23 06:04 03/30/23 16:00 810-57977-29 105-DW-30 Drinking Water 03/23/23 06:08 03/30/23 16:00 810-57977-30 105-DW-31 Drinking Water 03/23/23 06:15 03/30/23 16:00 810-57977-31 105-DW-32 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-32 105-DW-33 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-33 105-DW-34 Drinking Water 03/23/23 06:23 03/30/23 16:00	810-57977-25	105-DW-25		03/23/23 05:54	03/30/23 16:00
810-57977-27 105-DW-28 Drinking Water 03/23/23 06:00 03/30/23 16:00 810-57977-28 105-DW-29 Drinking Water 03/23/23 06:04 03/30/23 16:00 810-57977-29 105-DW-30 Drinking Water 03/23/23 06:08 03/30/23 16:00 810-57977-30 105-DW-31 Drinking Water 03/23/23 06:15 03/30/23 16:00 810-57977-31 105-DW-32 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-32 105-DW-33 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-33 105-DW-34 Drinking Water 03/23/23 06:23 03/30/23 16:00	810-57977-26	105-DW-26	_	03/23/23 05:56	03/30/23 16:00
810-57977-28 105-DW-29 Drinking Water 03/23/23 06:04 03/30/23 16:00 810-57977-29 105-DW-30 Drinking Water 03/23/23 06:08 03/30/23 16:00 810-57977-30 105-DW-31 Drinking Water 03/23/23 06:15 03/30/23 16:00 810-57977-31 105-DW-32 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-32 105-DW-33 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-33 105-DW-34 Drinking Water 03/23/23 06:23 03/30/23 16:00	810-57977-27	105-DW-28	_	03/23/23 06:00	03/30/23 16:00
810-57977-29 105-DW-30 Drinking Water 03/23/23 06:08 03/30/23 16:00 810-57977-30 105-DW-31 Drinking Water 03/23/23 06:15 03/30/23 16:00 810-57977-31 105-DW-32 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-32 105-DW-33 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-33 105-DW-34 Drinking Water 03/23/23 06:23 03/30/23 16:00	810-57977-28	105-DW-29		03/23/23 06:04	03/30/23 16:00
810-57977-30 105-DW-31 Drinking Water 03/23/23 06:15 03/30/23 16:00 810-57977-31 105-DW-32 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-32 105-DW-33 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-33 105-DW-34 Drinking Water 03/23/23 06:23 03/30/23 16:00	810-57977-29	105-DW-30	_	03/23/23 06:08	03/30/23 16:00
810-57977-31 105-DW-32 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-32 105-DW-33 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-33 105-DW-34 Drinking Water 03/23/23 06:23 03/30/23 16:00	810-57977-30	105-DW-31	_	03/23/23 06:15	03/30/23 16:00
810-57977-32 105-DW-33 Drinking Water 03/23/23 06:20 03/30/23 16:00 810-57977-33 105-DW-34 Drinking Water 03/23/23 06:23 03/30/23 16:00	810-57977-31	105-DW-32	.	03/23/23 06:20	03/30/23 16:00
810-57977-33 105-DW-34 Drinking Water 03/23/23 06:23 03/30/23 16:00	810-57977-32	105-DW-33	· · · · · · · · · · · · · · · · · · ·	03/23/23 06:20	03/30/23 16:00
	810-57977-33	105-DW-34	·	03/23/23 06:23	03/30/23 16:00
5.5 5.5. 5. 55 2 50 Dilling Hatel 55/20/20 00/20/20 10:00	810-57977-34	105-DW-35	Drinking Water		

Drinking Water

03/23/23 06:28 03/30/23 16:00

810-57977-35

105-DW-36

3

4

Q

9

10

eurofins :

CHAIN OF CUSTODY RECORD

Eat	Eaton Analytical E	EUROFINS EATON ANALYTICAL USE ONLY.	TICAL U	SE ONL	<u> </u>									/20
	_	LOGIN COMMENTS:						SAMPLI	ES CHE	CKED /	SAMPLES CHECKED AGAINST COC BY:	OC BY:		— 4/1′
750 Royal Oaks Drive, Suite 100 Monrovia, CA 91016-3629	e 100								ဖွ	AMPLE	SAMPLES LOGGED IN BY:	DIN BY:		
Phone: 626 386 1100	٦٥	SAMPLE TEMP RECEIVED AT: (Other) IR Gur	IR Gun ID	<u>-</u>	1	(Obse	(Observation=	°C) (Corr.Factor	PLES RE	C'D DA	SAMPLES REC'D DAY OF COLLECTION? Corr.Factor °C) (Final =	್∐	(check for yes)	
Fax: 626 386 1101	7	Monrovia	IR Gun ID =	D =		(Obse	(Observation=	°C) (Corr.Factor	actor		°C) (Final =			
800 566 LABS (800 566 5227)	27)	Compliance Acceptance Criteria: (Chemistry:	riteria: (Ci		4 ± 2 °C)	4 ± 2 °C) (Microbiology: < 10°C)	10°C)		1					
Website:		TYPE OF ICE: Real	_ Synthetic	etic	No Ice		CONDITION OF	OF ICE: Frozen	P	Partially Frozen	rozen	_ Thawed	N/A	
Ilub.//www.euroiliads.coll#Eaton	aici	METHOD OF SHIPMENT: Pick-Up / Walk-In / FedEx / UPS	MENT:	Pick-Up	/ Wal	k-In / FedEx	-	DHL / Area Fast / Top Line / Other:	/ Top L	ine / (Other:			
TO BE COMPLETED BY SAMPLER:								(check for yes)	for yes)			(che	(check for yes)	
COMPANY/AGENCY NAME:	Burns & McDonnell	PROJECT CODE:				c	COMPLIANCE SAMPLES	SAMPLES		NON-CO	OMPLIANC ATION INV	NON-COMPLIANCE SAMPLES		
eapulcher@burnsmed.com	ncd.com	12:	121244		ı	Type of sam	Type of samples (circle one):	(circle one): ROUTINE	SPECIAL	CONF	SPECIAL CONFIRMATION		(eg. SDWA, NPDES, etc.)	
EEA CLIENT CODE:	COC ID:	SAMPLE GROUP:	GFC			SEE ATTACHED K	CHED KIT	IT ORDER FOR ANALYSES	ANAL	YSES		(check for yes),	/es), OR	
						List ALL	NALYSES R	List ALL ANALYSES REQUIRED (enter number of bottles sent for each test for each sample)	er numb	er of bo	ttles sent fo	or each test for	each sample)	
TAT requested: rush by adv notice only	ce only	STD 1 wk 3 day	2 day	1 day	ay	gk<						2		
SAMPLE DATE SAMPLE TIME	SAMPLE ID	CLIENT LAB ID	MATRIX *	Turnaround Time	# of Container	ical & a						COM	COMMENTS	of 24
3123123 0450 105 - DW	Dw-01		DW	WS	1	X	810-579	-57977 Chain of Custody	stody			Ch	Chlorinated	20
105 -	1-02		DW	WS	_	_						C _F	Chlorinated	age
105-6)w-03		DW	WS	-	×						Ch	Chlorinated	Р
165 - 6	10-MC		DW	WS	1	_						Ch	Chlorinated	
1881	JW-05		DW	WS	_	Х						Ch	Chlorinated	
3/23/23 105 - DW	1-06		DW	WS	-	ブ		OHA	Cer	1		C _h	Chlorinated	
105 -	1-07		DW	WS	_	>						C _F	Chlorinated	
105 -	DW-05		DW	WS	_	×						S.	Chlorinated	
165 -	1-09		DW	WS	1	ゝ						Ch	Chlorinated	
i	10		DW	WS	-	*						Ch Ch	Chlorinated	
* MATRIX TYPES: RSW = RGW =	RSW = Raw Surface Water RGW = Raw Ground Water	CFW = Chlor(am)inated Finished Water FW = Other Finished Water	ted Finis Water	hed Wa	iter	SEAW = Sea Water WW = Waste Water	Water Water	BW = Bottled Water SW = Storm Water	Water Water	SO:	SO = Soil SL = Sludge	0 = Other -	O = Other - Please Identify	
Sid	SIGNATURE			PRINT NAME	AME			COMPANY/TITLE	ITLE			DATE	TIME	
RELINQUISHED BY:		Jasha	4.4	Arnole	6		CH-WING	EL 1800			3.2	3-27-23		
		Kan	Kameran		Villiams	25	661	A-SB			3/3	130/23	1600	
BY:											+			
RECEIVED BY:											_			

9 4

QA FO 0029.3 (Version 3) (01/13/16)

10

CHAIN OF CUSTODY RECORD

MPLES	NON-COMPLIANCE SAMPLES	L	COMPLIANCE SAMPLES	_		PROJECT CODE:	Burns & McDonnell	COMPANY/AGENCY NAME: Burns & McDonnell PROJECT CODE:
(check for yes)		ck for yes					ER:	TO BE COMPLETED BY SAMPLER:
	Line / Other:	METHOD OF SHIPMENT: Pick-Up / Walk-In / FedEx / UPS / DHL / Area Fast / Top Line / Other:	FedEx / UPS / I	Walk-In	PMENT: Pick-Up	METHOD OF SHIF		IIII.//WWW.curoiii.eue.com/Lacon
Thawed N/A	Partially Frozen Th		No IceCONDITION OF ICE: Frozen_	No Ice	1	TYPE OF ICE: Real Synthetic _		Website:
			biology: < 10°C)	2°C) (Micro	Criteria: (Chemistry: 4 s	Compliance Acceptance Criteria: (Chemistry: 4 ± 2 °C) (Microbiology: < 10°C)	5227)	800 566 LABS (800 566 5227)
ကို	°C) (Final =	°C) (Corr Factor	(Observation=		IR GIN ID =	Monrovia		Fax. 020 300 1101
°C)	°C) (Final =	°C) (Corr.Factor_	(Observation=		(Other) IR Gun ID =	(Other)		Phone: 626 386 1100
N? (check for ve	SAMPLES REC'D DAY OF COLLECTION? I check for ve	SAMPLES RE			ED AT:	SAMPLE TEMP RECEIVED AT:		14 Cili Card, Ci. Ci. Ci. Ci.
3Y:	SAMPLES LOGGED IN BY:	S					ouite 100	Monrovia CA 91016-3629
3Y:	SAMPLES CHECKED AGAINST COC BY:	SAMPLES CHE				LOGIN COMMENTS:		
					YTICAL USE ONLY	EUROFINS EATON ANALYTICAL USE ONLY:	Eaton Analytical	
		CHAIN OF CUSTODY RECORD	COSTOD	0+0	CHAIN			eurofins

TO BE COMPLETED BY SAMPLER:	PLER:						(check for yes)		(check for yes)	
COMPANY/AGENCY NAME:	E: Burns & McDonnell	PROJECT CODE:				COMPLIANCE SAMPLES		NON-COMPLIANCE SAMPLES	E SAMPLES	
eapulcher(eapulcher@burnsmcd.com	12	121244			- Requires	- Requires state forms REGULATION IN	REGULATION INVOLVED:	/OLVED:	
EEA CLIENT CODE:	COC ID:	SAMPLE GROUP:	GFC				ORDER FOR ANAL	YSES	(check for yes), OR	
						List ALL ANALYSES R	EQUIRED (enter numb	er of bottles sent fo	REQUIRED (enter number of bottles sent for each test for each sample)	e)
TAT requested: rush by adv notice only	v notice only	STD X 1 wk 3 day	2 day	1 day	lay	96				
SAMPLE DATE SAMPLE TIME	SAMPLE ID	CLIENT LAB ID	MATRIX *	Turnaround Time	# of Container	lead ring			COMMENTS	f 24
3/23/23 141 175	O: AL		DW	WS	_	ス			Chlorinated	1.0
202	-DW-12		DW	WS	_	X			Chlorinated	70.
105	-0W-13		DW	WS	1				Chlorinated	Do.
105	DW-14		DW	WS	1	ム	u acceptoo	14	Chlorinated	_
105 -	DW-15		DW	ws	1	7	Pin I		Chlorinated	
105	-DW-16		DW	WS	1	X			Chlorinated	L
- 1	-0W-17		DW	WS	1	7			Chlorinated	
105	- DW-18		DW	WS	1	7			Chlorinated	
105	19 - W.G-		DW	WS	1	*			Chlorinated	
1	DW-20		DW	WS	1	7			Chlorinated	L
* MATRIX TYPES: R	RSW = Raw Surface Water RGW = Raw Ground Water	CFW = Chlor(am)inated Finished Water FW = Other Finished Water	ated Finis d Water	shed Wa	ater	SEAW = Sea Water WW = Waste Water	BW = Bottled Water SW = Storm Water	SO = Soil SL = Sludge	O = Other - Please Identify	tify
	SIGNATURE			PRINT NAME	AME		COMPANY/TITLE		DATE TIME	
SAMPLED BY:		4	Justin	Arnol of		044-1	-TEC/PM	1/4	3/27/24	
RECEIVED BY:		Kan	Kameron	Will	lams	EA-	88	63/	03/30/23 1600	
ОВУ										
RECEIVED BY:										

PAGE Z OF

eurofins

Eaton Analytical

10

CHAI
OF
CUS
TOD
Y RE
COR
Ö

http://www.eurofinsus.com/Eaton	Website:	800 566 LABS (800 566 5227)		Fax: 626 386 1101	Db. 636 386 1100	Monrovia, CA 91016-3629		
METHOD OF SHIDNENT: Dick-I in / Walk-in / EndFy / IIPS / DHt / Area Fast / Ton line / Other	TYPE OF ICE: Real Synthetic No Ice CONDITION OF ICE: Frozen Partially Frozen	Compliance Acceptance Criteria: (Chemistry: 4 ± 2 °C) (Microbiology: < 10°C)	Monrovia IR Gun ID = (Observation=	(Other) IR Gun ID = (Observation=	SAMPLE TEMP RECEIVED AT:		LOGIN COMMENTS:	EUROFINS EATON ANALYTICAL USE ONLY:
DHI / Area Fast / Ton Line / Other	FICE: Frozen Partially Frozen Thawed N/A		°C) (Corr.Factor °C) (Final = °C)	°C) (Corr.Factor °C) (Final = °C)	SAMPLES REC'D DAY OF COLLECTION? (check for yes)	SAMPLES LOGGED IN BY:	SAMPLES CHECKED AGAINST COC BY:	

Websitie: http://www.eurofinsus.com/Eaton TYPE OF ICE: Real
TYPE OF ICE: Real
TYPE OF ICE: Real Synthetic No METHOD OF SHIPMENT: Pick-Up / Wal
TYPE OF ICE: Real
TYPE OF ICE: Real Synthetic No METHOD OF SHIPMENT: Pick-Up / Wal
TYPE OF ICE: RealSyntheticNoNoNoSyntheticNoNoSyntheticNoNoSyntheticNoNoSyntheticNoNoNoNoNoNoSyntheticNoNoNoNoNoNoNoN
TYPE OF ICE: RealSyntheticNoNoNoSyntheticNoSyntheticNoNoSyntheticNoNoSyntheticNoNoNoNoNoNoNoSyntheticNoNoNoNoNoNoNoN
TYPE OF ICE: Real Synthetic No METHOD OF SHIPMENT: Pick-Up / Wall Synthetic No
TYPE OF ICE: RealSyntheticNoNoNoSyntheticNoSyntheticNoNoSyntheticNoNoSyntheticNoNoNoNoNoNoNoSyntheticNoNoNoNoNoNoNoN
TYPE OF ICE: RealSyntheticNoNoNoNoNoSyntheticNoNoNoNoNoNoNoN
TYPE OF ICE: Real Synthetic No METHOD OF SHIPMENT: Pick-Up / Wall PROJECT CODE: Burns & McDonnell PROJECT CODE: 121244 COC ID: SAMPLE GROUP: GFC
TYPE OF ICE: Real Synthetic No METHOD OF SHIPMENT: Pick-Up / Wall Surnsmed.com PROJECT CODE: COC ID: SAMPLE GROUP: GFC
TYPE OF ICE: Real Synthetic No METHOD OF SHIPMENT: Pick-Up / Wal ER: Burns & McDonnell PROJECT CODE: 121244
om/Eaton LER: Burns & McDonnell P
/Eaton TYPE
w.eurofinsus.com/Eaton
TYPE OF ICE: Real Synthetic

RECEIVED BY: RELINQUISHED BY

RECEIVED BY:

Kameran

EEA-SB

03/30/23

1600

PAGE 3 OF 4

DULY-TEC/PM

Just.

Anoid

eurofins :

10

CHAIN OF CUSTODY RECORD

s, Suite 100 3629		Eaton Analytical
	LOGIN COMMENTS:	EUROFINS EATON ANALYTICAL USE ONLY:

750 Royal Oaks Drive, Suite 100	LOGIN COMMENTS:				SAMPLES CHECKED AGAINST COC BY: SAMPLES CHECKED AGAINST COC BY:	GED IN BY:
Phone: 626 386 1100	SAMPLE TEMP RECEIVED AT:	ED AT:	5		SAMPLES REC'D DAY OF COLLECTION?	CLECTION? (check for yes)
Fax: 626 386 1101	Monrovia	IR Gun ID =	D =		°C) (Corr.Factor	
800 566 LABS (800 566 5227)	Compliance Acceptance Criteria: (Chemistry: 4 ± 2 °C) (Microbiology: < 10°C)	riteria: (Ch	emistry: 4	±2"C)		
Website:	TYPE OF ICE: Real	Synthetic	tic	No Ice	ce CONDITION OF ICE: Frozen Partially Frozen	Thawed N/A
nttp://www.euronnsus.com/Eaton	METHOD OF SHIP	MENT:	Pick-Up	/ Wa	METHOD OF SHIPMENT: Pick-Up / Walk-In / FedEx / UPS / DHL / Area Fast / Top Line / Other:	
TO BE COMPLETED BY SAMPLER:					(check for yes)	(check for yes)
COMPANY/AGENCY NAME: Burns & McDonnell	PROJECT CODE:				_	۱۲
eapulcher@burnsmcd.com	121	121244			Type of samples (circle one): ROUTINE SPECIAL CONFIRMATION	NYOLVED: (eg. SDWA, NPDES, etc.)
EEA CLIENT CODE: COC ID:	SAMPLE GROUP:	GFC			SEE ATTACHED KIT ORDER FOR ANALYSES	(check for yes), OR
					List ALL ANALYSES REQUIRED (enter number of bottles sent for each test for each sample)	t for each test for each sample)
TAT requested: rush by adv notice only	STD X 1 wk 3 day_	2 day	1 day	У	ppe	
SAMPLE TIME SAMPLE TIME	CLIENT LAB ID	MATRIX *	Turnaround Time	# of Container	Lend + Cop	COMMENTS
3/23/23 04/5 105 - DW-31		DW	WS	-	X	Chlorinated
105 -		DW	WS	1	\[\]	Chlorinated
105 -		DW	WS	_	×	Chlorinated
165		DW	WS	1	X DH Acceptance	Chlorinated
105 -1		DW	WS	1	×	Chlorinated
105-1		DW	WS	-	× -	Chlorinated
* MATRIX TYPES: RSW = Raw Surface Water RGW = Raw Ground Water	r	ted Finisl Water	ned Wa	ter	SEAW = Sea Water BW = Bottled Water SO = Soil WW = Waste Water SW = Storm Water SL = Sludge	O = Other - Please Identify
SIGNATURE			PRINT NAME	ME	COMPANY/TITLE	DATE TIME
RELINQUISHED BY:	Justa	1	Amol 1	-	OCIA-TEI/M	3-27-23
RECEIVED BY:	Kamara	5	San'II'.	744	82-833	02/20/22 (6/8)

QA FO 0029.3 (Version 3) (01/13/16)

RECEIVED BY: RELINQUISHED BY Client: Burns & McDonnell Job Number: 810-57977-1

Login Number: 57977 List Source: Eurofins Eaton Analytical South Bend

List Number: 1

Creator: Williams, Kameron

Question	Answer	Comment
The cooler's custody seal, if present, is intact.	True	
Sample custody seals, if present, are intact.	True	
Samples were received on ice.	False	Thermal preservation not required.
Cooler Temperature is acceptable.	True	
Cooler Temperature is recorded.	False	Thermal preservation not required.
COC is present.	True	
COC is filled out in ink and legible.	True	
COC is filled out with all pertinent information.	True	
There are no discrepancies between the containers received and the COC.	True	
Samples are received within Holding Time (excluding tests with immediate HTs)	True	
Sample containers have legible labels.	True	
Containers are not broken or leaking.	False	Refer to Job Narrative for details.
Sample collection date/times are provided.	True	
There is sufficient vol. for all requested analyses, incl. any requested MS/MSDs	True	
Containers requiring zero headspace have no headspace or bubble is <6mm (1/4").	True	
Samples do not require splitting or compositing.	True	
Container provided by EEA	True	

ANALYTICAL REPORT

PREPARED FOR

Attn: Mr. Matt Shanahan Burns & McDonnell 425 South Woods Mill Road Chesterfield, Missouri 63017

Generated 4/28/2023 12:24:06 AM

JOB DESCRIPTION

GFC

JOB NUMBER

810-60774-1

Eurofins Eaton Analytical South Bend 110 S Hill Street South Bend IN 46617



Eurofins Eaton Analytical South Bend

Job Notes

This report may not be reproduced except in full, and with written approval from the laboratory. The results relate only to the samples tested. For questions please contact the Project Manager at the e-mail address or telephone number listed on this page.

The test results in this report relate only to the samples as received by the laboratory and will meet all requirements of the methodology, with any exceptions noted. This report shall not be reproduced except in full, without the express written approval of the laboratory. All questions should be directed to the Eurofins Eaton Analytical, LLC Project Manager.

Authorization



Authorized for release by Amanda Scott, Project Manager Amanda.Scott@et.eurofinsus.com (574)233-4777

3

4

6

7

_

1,

Client: Burns & McDonnell Project/Site: GFC

Laboratory Job ID: 810-60774-1

Table of Contents

Cover Page	1
Table of Contents	3
Definitions/Glossary	4
Case Narrative	
Client Sample Results	
Lab Chronicle	7
Certification Summary	
Method Summary	9
Sample Summary	10
Chain of Custody	
Receipt Chacklists	12

5

6

8

9

Definitions/Glossary

Client: Burns & McDonnell Job ID: 810-60774-1

Project/Site: GFC

Glossary

MDL

ML

MPN

MQL

NC

ND

NEG

POS

PQL

PRES

QC RER

RL RPD

TEF

TEQ

Abbreviation	These commonly used abbreviations may or may not be present in this report.	
¤	Listed under the "D" column to designate that the result is reported on a dry weight basis	
%R	Percent Recovery	
CFL	Contains Free Liquid	
CFU	Colony Forming Unit	
CNF	Contains No Free Liquid	
DER	Duplicate Error Ratio (normalized absolute difference)	
Dil Fac	Dilution Factor	
DL	Detection Limit (DoD/DOE)	
DL, RA, RE, IN	Indicates a Dilution, Re-analysis, Re-extraction, or additional Initial metals/anion analysis of the sample	
DLC	Decision Level Concentration (Radiochemistry)	
EDL	Estimated Detection Limit (Dioxin)	
LOD	Limit of Detection (DoD/DOE)	
LOQ	Limit of Quantitation (DoD/DOE)	
MCL	EPA recommended "Maximum Contaminant Level"	
MDA	Minimum Detectable Activity (Radiochemistry)	
MDC	Minimum Detectable Concentration (Radiochemistry)	

Me hod Detection Limit

Minimum Level (Dioxin)

Most Probable Number

Not Calculated

Nega ive / Absent

Positive / Present

Presumptive **Quality Control**

Me hod Quantitation Limit

Practical Quantitation Limit

Relative Error Ra io (Radiochemistry)

Toxicity Equivalent Factor (Dioxin)

Toxicity Equivalent Quotient (Dioxin)

Reporting Limit or Requested Limit (Radiochemistry)

Relative Percent Difference, a measure of the relative difference between two points

Not Detected at the reporting limit (or MDL or EDL if shown)

Case Narrative

Client: Burns & McDonnell Job ID: 810-60774-1

Project/Site: GFC

Job ID: 810-60774-1

Laboratory: Eurofins Eaton Analytical South Bend

Narrative

Job Narrative 810-60774-1

Receipt

The sample was received on 4/25/2023 9:00 AM. Unless otherwise noted below, the sample arrived in good condition, and, where required, properly preserved and on ice.

Metals

No additional analytical or quality issues were noted, other than those described above or in the Definitions/ Glossary page.

4

4

<u>_</u>

U

0

Client Sample Results

Client: Burns & McDonnell Job ID: 810-60774-1

Project/Site: GFC

Client Sample ID: 105-DW-27 Room 345

Lab Sample ID: 810-60774-1

Date Collected: 04/19/23 05:37 Matrix: Drinking Water

Date Received: 04/25/23 09:00

Method: EPA 200.8 - Metals (ICP/I	MS)						
Analyte	Result Qualif	fier RL	Unit	D	Prepared	Analyzed	Dil Fac
Lead	0.77	0.50	ug/L			04/27/23 18:26	1
Copper	76	1.0	ug/L			04/27/23 18:26	1

4

5

9

10

a a

Lab Chronicle

Client: Burns & McDonnell Job ID: 810-60774-1

Project/Site: GFC

Client Sample ID: 105-DW-27 Room 345

Lab Sample ID: 810-60774-1

Date Collected: 04/19/23 05:37 Matrix: Drinking Water

Date Received: 04/25/23 09:00

	Batch	Batch		Dilution	Batch			Prepared
Prep Type	Туре	Method	Run	Factor	Number	Analyst	Lab	or Analyzed
Total/NA	Analysis	200.8		1	57016	NB	EA SB	04/27/23 18:26

Laboratory References:

EA SB = Eurofins Eaton Analytical South Bend, 110 S Hill Street, South Bend, IN 46617, TEL (574)233-4777

Eurofins Eaton Analytical South Bend

Accreditation/Certification Summary

Client: Burns & McDonnell Job ID: 810-60774-1

Project/Site: GFC

Laboratory: Eurofins Eaton Analytical South Bend

The accreditations/certifications listed below are applicable to this report.

Authority	Program	Identification Number	Expiration Date
Missouri	State	880	09-30-24

3

1

6

_

9

Method Summary

Client: Burns & McDonnell

Project/Site: GFC

Job ID: 810-60774-1

Method	Method Description	Protocol	Laboratory
200.8	Metals (ICP/MS)	EPA	EA SB

Protocol References:

EPA = US Environmental Protection Agency

Laboratory References:

EA SB = Eurofins Eaton Analytical South Bend, 110 S Hill Street, South Bend, IN 46617, TEL (574)233-4777


Sample Summary

Client: Burns & McDonnell

Project/Site: GFC

Job ID: 810-60774-1

Lab Sample ID	Client Sample ID	Matrix	Collected	Received
810-60774-1	105-DW-27 Room 345	Drinking Water	04/19/23 05:37	04/25/23 09:00

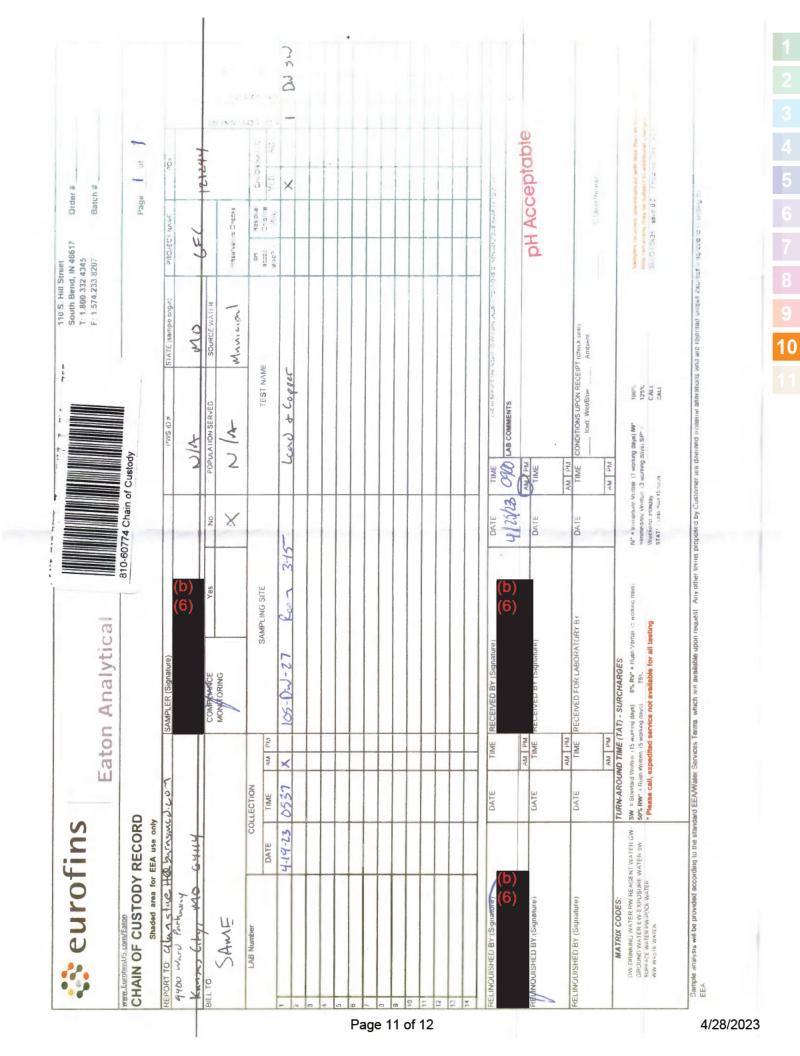

Client: Burns & McDonnell

Job Number: 810-60774-1

Login Number: 60774

List Source: Eurofins Eaton Analytical South Bend

List Number: 1

Creator: Williams, Kameron

Question	Answer	Comment
The cooler's custody seal, if present, is intact.	True	
Sample custody seals, if present, are intact.	True	
Samples were received on ice.	False	Thermal preservation not required.
Cooler Temperature is acceptable.	True	
Cooler Temperature is recorded.	False	Thermal preservation not required.
COC is present.	True	
COC is filled out in ink and legible.	True	
COC is filled out with all pertinent information.	True	
There are no discrepancies between the containers received and the COC.	True	
Samples are received within Holding Time (excluding tests with immediate HTs)	True	
Sample containers have leg ble labels.	True	
Containers are not broken or leaking.	True	
Sample collection date/times are provided.	True	
There is sufficient vol. for all requested analyses, incl. any requested MS/MSDs	True	
Containers requiring zero headspace have no headspace or bubble is <6mm (1/4").	True	
Samples do not require splitting or compositing.	True	
Container provided by EEA	True	